

Replacement Orifice

Applies to Replacement Heat Exchanger Installation on Models UDAP, UDAS, UDBP, and UDBS Size 250 using Natural Gas and manufactured prior to 1/07

Application

If all of the following are true, follow the instructions below to install the orifice shipped with the replacement heat exchanger:

- ◇ Unit is a Model UDAP, UDAS, UDBP, or UDBS Size 250
- ◇ Unit operates on natural gas
- ◇ Unit was manufactured prior to 1/07

If the heater being serviced uses propane, discard the orifice and this instruction sheet.


Component

Replacement Orifice, **P/N 208255**, Drill "L", Brass

Orifice Installation Instructions

- 1) Refer to **FIGURE 1** and locate the gas orifice. Carefully remove the natural gas orifice on the heater.
- 2) Install the replacement orifice listed above.
- 3) Leak test all joints with a leak-testing solution.

FIGURE 1 - Before restarting a natural gas Size 250 UDAP, UDAS, UDBP, or UDBS unit with a replacement heat exchanger, remove the orifice and replace with the orifice shipped with the heat exchanger.

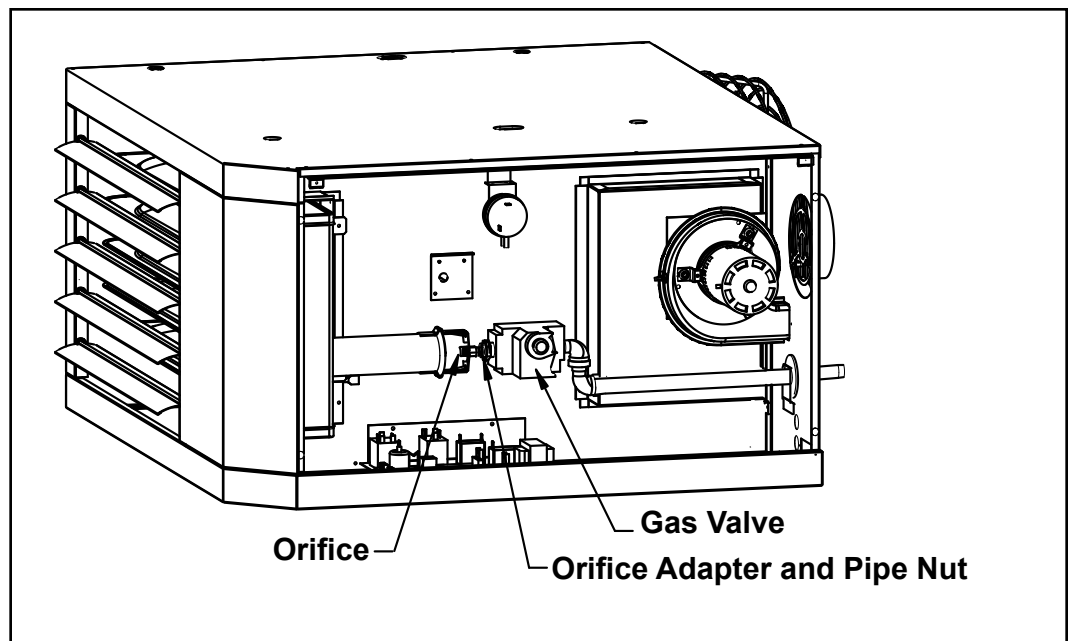

(800) 695-1901; www.ReznorHVAC.com

©2014 Reznor, LLC. All rights reserved.

Trademark Note: Reznor®, TCORE[®], and V3[®] are registered in at least the United States.

0514 Form RZ-NA CP-UD250-Orifice (Version 0.1)