

WIRING DIAGRAM


P6SP-072(C/D) SERIES

208-230/460 Volt

3 Phase / 60 Hz.

NOTES:

1. For supply wire ampacities and overcurrent protection, see unit rating label.
2. For 072C models only. For 208V operation, remove wire from 240V tap on transformer and install on 208V tap.
3. Wires attached to normally open contacts.
4. Wires attached to normally closed contacts.
5. Disconnect all power before servicing.
6. For supply connections, use copper conductors only.
7. If any of the original wire as supplied with the unit must be replaced, it must be replaced with wiring material having a temperature rating of at least 105C.

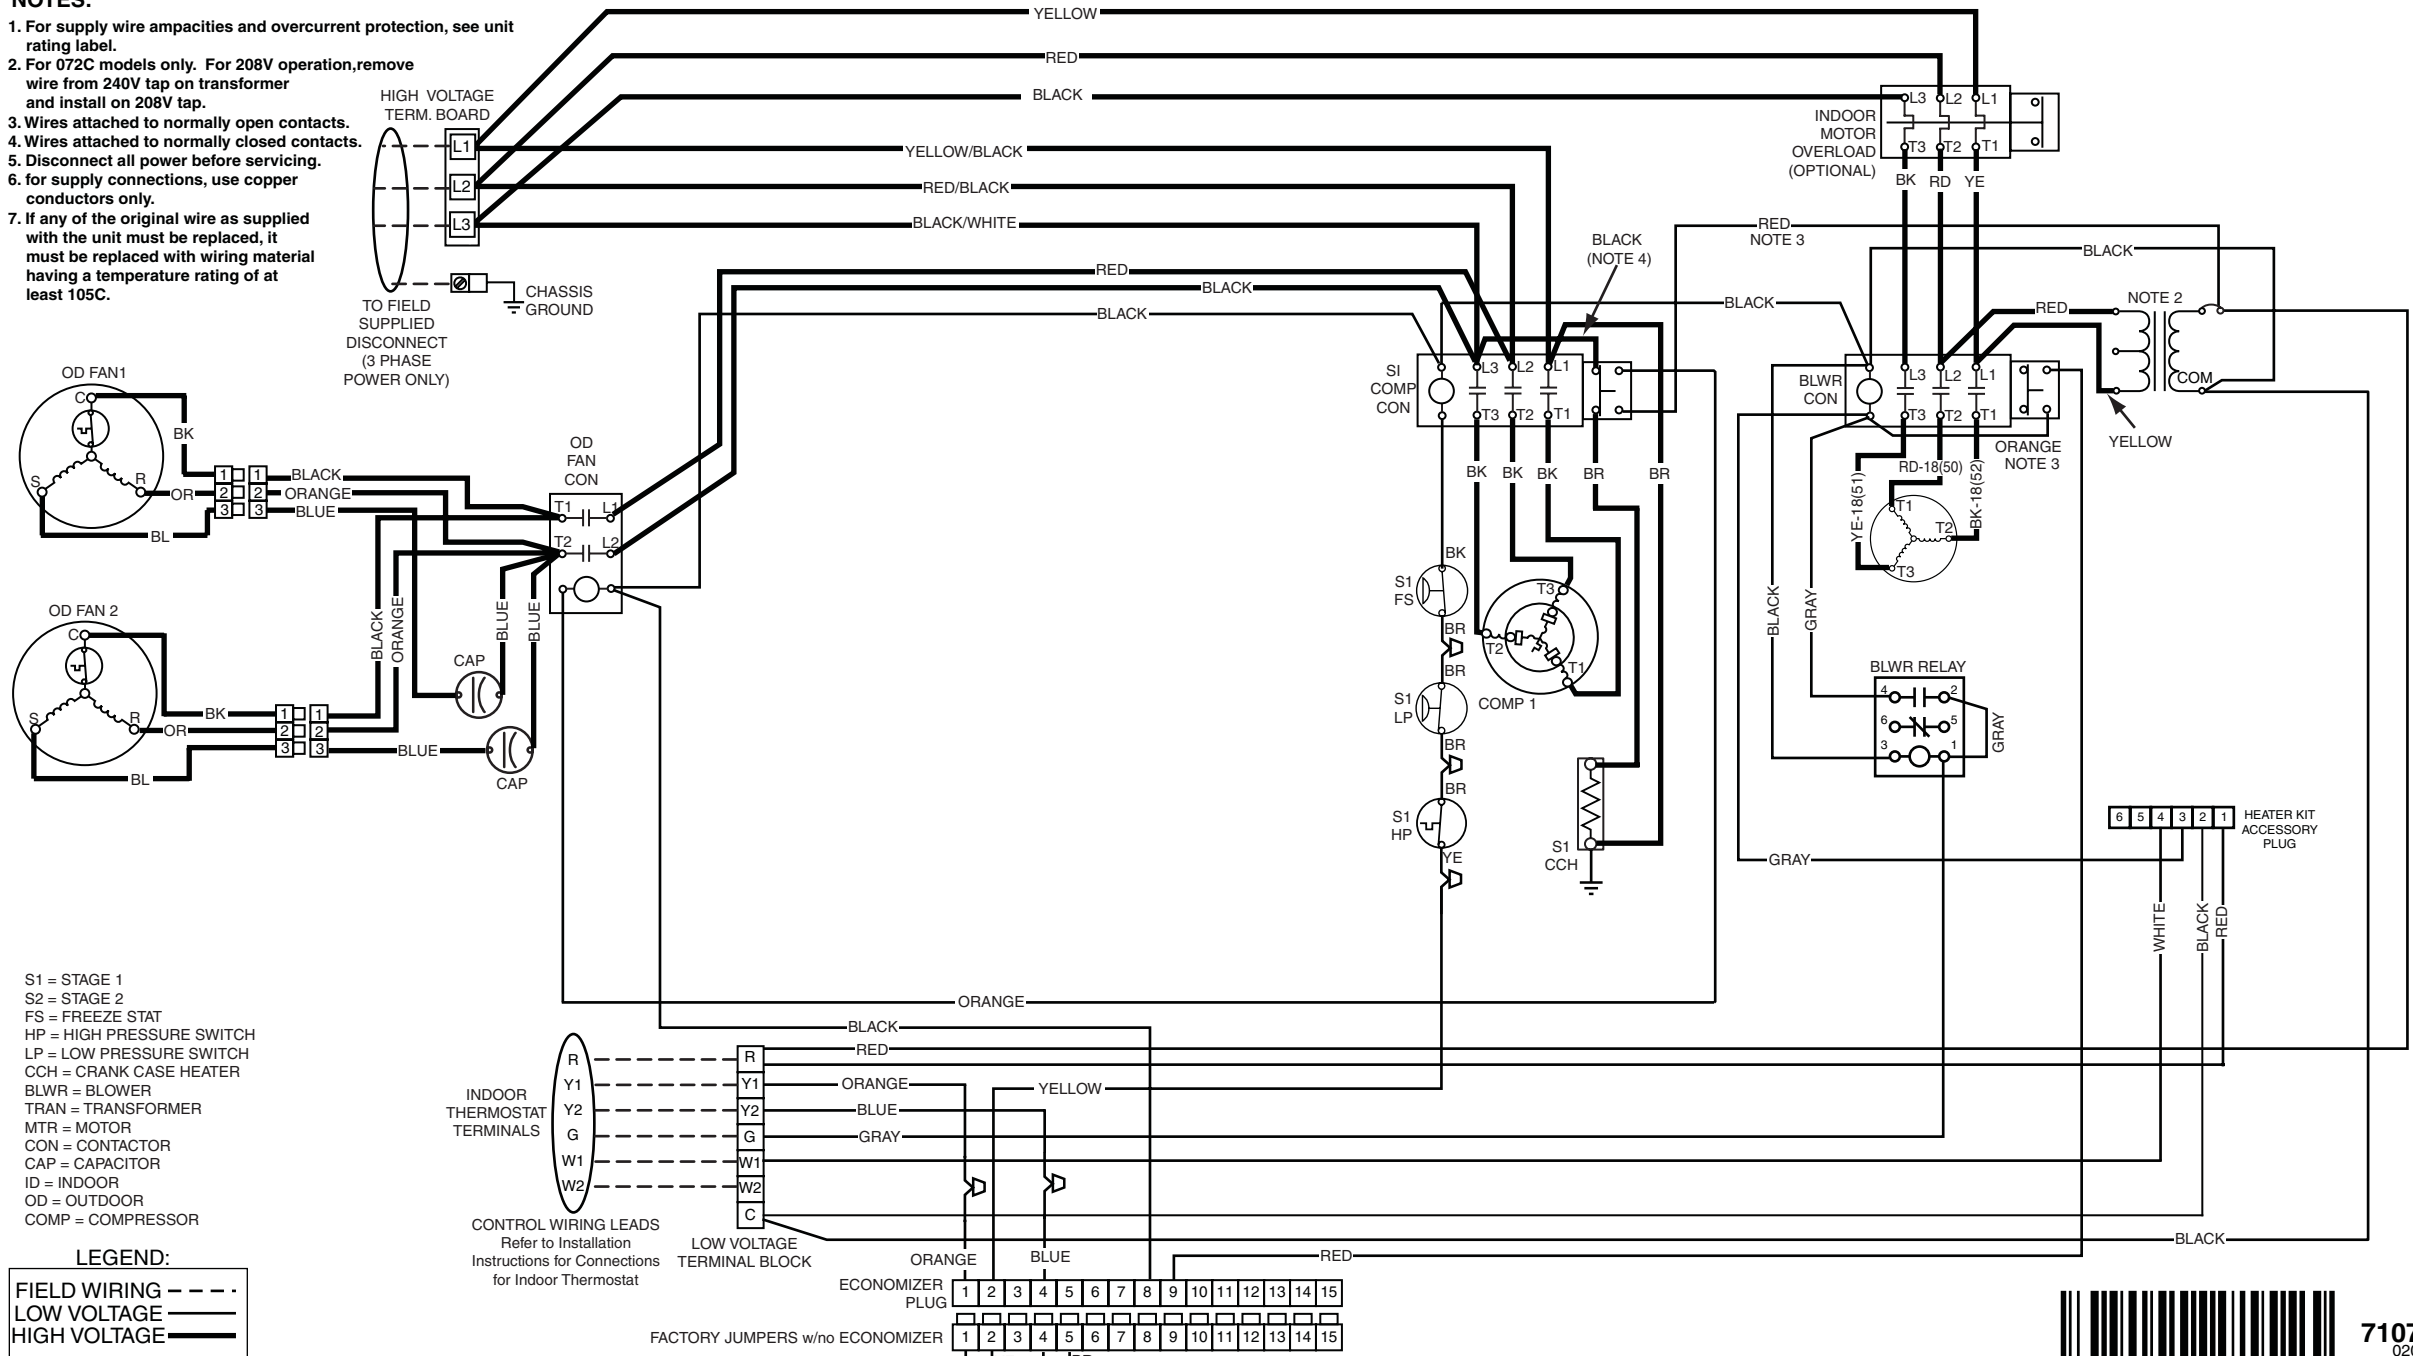

- S1 = STAGE 1
 S2 = STAGE 2
 FS = FREEZE STAT
 HP = HIGH PRESSURE SWITCH
 LP = LOW PRESSURE SWITCH
 CCH = CRANK CASE HEATER
 BLWR = BLOWER
 TRAN = TRANSFORMER
 MTR = MOTOR
 CON = CONTACTOR
 CAP = CAPACITOR
 ID = INDOOR
 OD = OUTDOOR
 COMP = COMPRESSOR

LEGEND:
 FIELD WIRING - - - -
 LOW VOLTAGE ————
 HIGH VOLTAGE ————