WIRING DIAGRAM

Q6SP Series Convertible Packaged/Electric Heat Pump

208-230/460 Volt

Three Phase 60 Hz.

- 1. Disconnect all power before servicing.
- 2. For supply connections use copper conductors only.
- If any of the original wire as supplied with the furnace must be replaced, it must be replaced with wiring material having a temperature rating of at least 105C.
- 4. For supply wire ampacities and overcurrent protection, see unit rating label.
- 5. For "C" Series Models only. For 208V operation remove wire from 230V tap and place on 208V tap.
- Couper le courant avant de faire letretien.
 Employez uniquement des conducteurs en cuivre.

