

Gasket Kit for Replacement Heat Exchanger

Applies: Model LDAP

Description / Application

To prevent damage during shipping or storage, gaskets for Model LDAP replacement heat exchangers are shipped in a parts bag and should be attached to the heat exchanger at the time of installation. All gaskets are self-adhesive and cut to size.

DANGER: The replacement heat exchanger should be installed by a qualified service agency in compliance with all codes and requirements of authorities having jurisdiction. Improper installation could result in death, serious injury and / or property damage. The qualified agency performing this work assumes responsibility for this installation.

Gasket Kit Components

Description	400	800	1200
Qty of Heat Exchangers per Unit	1	2	3
Gasket Kit P/N	209211 (1 per heat exchanger)		
Components in each kit:			
Header Panel Gasket Top & Bottom	(2) 207727, 1" x 33-27/32" Long		
Header Panel Gasket Sides	(2) 207728, 1" x 37-17/32" Long		

WARNING: Proper installation and sealing of the heat exchanger to the heater is necessary for reliable and safe operation. Failure to properly install could result in death, serious injury and / or property damage.


Gasket Kit Instructions

- Determine the position of each gasket as illustrated. Line up holes in top and side gaskets; ignore large holes in bottom gasket.
- To apply, start at the end and gradually peel the backing from the gasket as it is adhered. Repeat with each strip. The header panel gaskets are sealing gaskets and must cover the full length of the surface.

Additional Maintenance Checks

- Refer to the, "Maintenance/Service" section of the heater Installation Manual, **Form I-LDAP**. As part of the replacement heat exchanger installation, inspect and clean the cabinet, burner and vent system. Replace any components that are not structurally sound.
- When the installation of the replacement heat exchanger is complete, review the, "Check Installation and Startup Section" in the heater Installation Manual. Follow the instructions on the lighting instructions plate to restart the heater.
- **CHECK ALL SAFETY FEATURES FOR PROPER OPERATION.**

Replacement Heat Exchanger Assembly

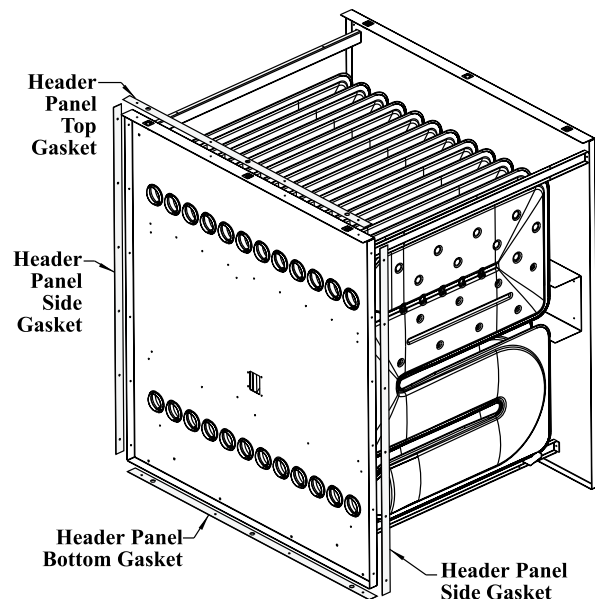

Specifications & illustrations subject to change without notice and without incurring obligations.

©Nortek Global HVAC, LLC 2016. All rights reserved.

All marks are the property of their respective organizations.

O'Fallon, MO | Printed in U.S.A. (6/16)

FORM CP-LDAP-RHXG (6-16), PN 209212 R1